

Alfa Laval SaniMidget SB 3-A

Rotary spray head tank cleaning device for low-flow-cleaning in hygienic applications

Introduction

The Alfa Laval SaniMidget SB 3-A is a rotary spray head tank cleaning machine for hygienic environments. Designed to clean tanks from 1-15 $\rm m^3.$

The Alfa Laval SaniMidget SB 3-A minimizes the consumption of water and cleaning media. Easy to customize to meet customer requirements, the SaniMidget SB 3-A allows companies to spend less time cleaning and more time producing.

The SaniMidget SB 3-A is authorized to carry the 3-A symbol.

Application

The Alfa Laval SaniMidget SB 3-A is designed for the removal of residues from hygienic tanks across dairy, brewery, distillery, beverage, food, personal care and many other industries.

Benefits

- 40% faster cleaning = more time for production
- Saves up 40% of your cleaning cost
- Dynamic cleaning performance and 360° full wetting
- Easy to retrofit traditional spray balls to a more economical solution

Standard design

Different choice of spray patterns suitable for various applications and tank designs, ranging from simple tanks to more complex tanks with structures such as agitator and baffles. The SaniMidget SB 3-A is lubricated by the cleaning media.

Working principle

The flow of the cleaning media causes the head of the Alfa Laval SaniMidget SB 3-A to rotate, and the fan-shaped jets layout a swirling pattern throughout the tank or reactor. This generates the wetting/impact needed for the efficient removal of the residual product; the cascading flow covers all internal surface of the vessel.



Spray Pattern





Certificates

2.2 material certificate, Q-doc, 3-A and ATEX.







TECHNICAL DATA

Lubricant:	Lubrication by rinse/cleaning fluid		
Wetting radius:	Max. 3 m		
Impact cleaning radius:	Max. effective 1.4 m		
Pressure			
Working pressure:	1-3 har		

Vvorking pressure:	1-3 bar
Recommended pressure:	2 bar

PHYSICAL DATA

Materials	
Metallic parts:	AISI 316L (UNS S31603)
Non-metallic parts:	PEEK 450G
* FDA compliance 21CFR§177	
Surface finish:	Ra < 0.8µm
Weight:	1": 0.20 kg / 1½": 0.44 kg
Temperature	
Max. working temperature:	95°C
Max. ambient temperature:	150°C

Connections

- Weld-on: 1" ISO 2037, or DN25 DIN11850-R1, or 1" BPE US	
- Clip-on: 1 1/2" ISO 2037, or 1" or 1 1/2" BPE US	

Clip-on options


Easy-on/off clip (ø4.0 mm). Clip needed for both clip-on and weld-on versions to assemble the machine


Caution

Avoid hydraulic shock, hard and abrasive particles in the cleaning liquid, as this can cause increased wear and/or damage of internal mechanisms. In general, a filter in the supply line is recommended. Do not use for gas evacuation or air dispersion. For steaming we refer to the manual.

Qualification Documentation (Q-doc)


Documentation specification					
	Equipment Documentation includes: - EN 10204 type 3.1 Material Inspection certificate				
Q-doc	- FDA Declaration of Conformity				
	- ADI Declaration (TSE)				
	- QC Declaration of Conformity				
	ATEX approved machine for use in explosive atmospheres.				
	Catagory 1 for installation in zone 0/20 in accordance to				
ATEX	Ex II 1 GD c T 140°C.				

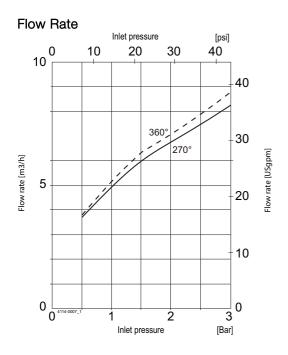

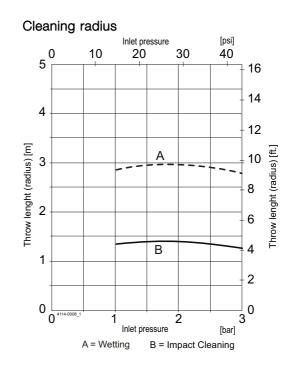

For Clip-on models, the flow rate is increased by approx. 0.5 m³/h. **Note:** The inlet pressure has been taken immediately before the inlet to the machine. In order to achieve the performance indicated on the curves, the pressure drop in the supply lines between pump and machine must be taken in consideration and the water temperature during testing was approx. 20°C.

Dimensions (mm)

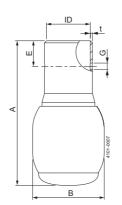

	Clip-on 1" BPE US	Clip-on 1½" BPE US/1½"	Weld-on* 1" ISO 2037	Weld-on* 1" BPE US	Weld-on* DN25 DIN R1
		ISO 2037			
	mm	mm	mm	mm	mm
ID	ø25.7	ø38.4	ø22.6	ø22.1	ø25.7
t	1.2	1.2	1.2	1.65	1.2
В	ø 42.0	ø54.7	ø 42.0	ø 42.0	ø42.0
A	84.8	118.3	104.8	108.8	84.8
ø-clip	ø4.0	ø 4.0	ø 4.0	ø 4.0	ø4.0
G	ø4.1	ø4.1	ø4.1	ø4.1	ø4.1
E	15.0	25.4			

* Weld-on version only meets the requirements of the 3-A Hygienic Standard 78-## if installed according to the user manual.

** Third Party Verification shows that this machine meets the requirements of the 3-A Hygienic Standard 78-##.

Alfa Laval reserves the right to change specifications without prior notification.

How to contact Alfa Laval Contact details for all countries are continually updated on our website. Please visit www.alfalaval.com to access the information direct.